

Assembly Instructions

Fly Right



Thank you for purchasing the Fly Right.

After opening the package, please check the parts list to make sure all pieces have arrived in good condition. If you have any questions during this assembly process, please call Customer Service.



⚠ WARNING

- Serious injury (including permanent paralysis or death) could result from any activity involving motion, rotation or height.
- All users of this equipment assume this risk of serious injury.
- Mats and pits cannot and do not eliminate hazards.

Safety Instructions

ALWAYS:

1. Consult an instructor prior to use.
2. Use equipment **ONLY** under the supervision of trained and equalified instructors.
3. Use equipment with trained spotters and the proper spotting equipment.
4. Check equipment before use for proper positioning; equipment can move during use.
5. Follow a progressive learning pattern. Assure basic skills are achieved before attempting more advanced skills.
6. Use equipment **ONLY** when all hard exposed surfaces are protected with proper mats.
7. Assure that all inflatable equipment has sufficient air pressure to avoid injury.

DO NOT use the apparatus with damaged, worn or missing parts.

DO NOT allow more than one person at a time to use the equipment.



Scan QR code for
Video Assembly
Instructions




Assembly Time
= 5 minutes



Assembly Requires
1 Adult

Parts List

- A. Base
- B. Pedestal
- C. D-2 Knob

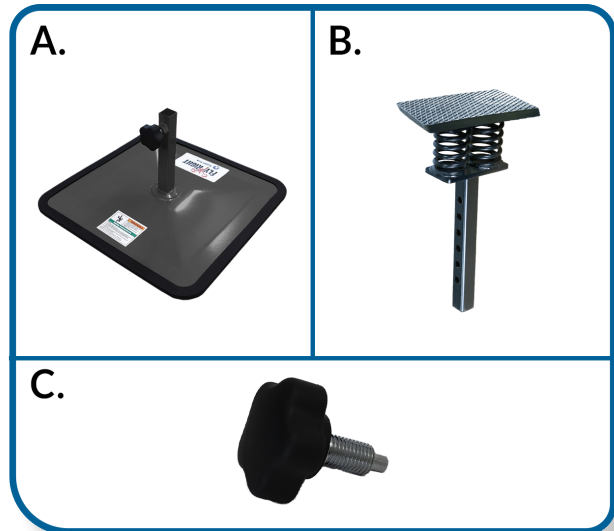

Tumbl Trak
Train Smart

Any questions or problems, please call (800) 331-4362
or email us at customerservice@tumbltrak.com | tumbltrak.com

1. Insert the pedestal into the upright column attached to the base. Make sure the holes on the pedestal are facing the direction of the hole in the upright.



2. Adjust the Fly Right to the desired height.



3. The D-2 knob is spring loaded for safety. Insert the D-2 knob into the hole and until you feel the knob engaging. (At this step you should still be able to raise and lower the platform).




4. As you adjust the platform, listen for the audible *click* which indicates that the spring pin has aligned with a hole.

Tighten the knob securely.
Do not over-tighten



5. To adjust the height of the platform, loosen the knob a few turns and pull the knob *outward* to disengage the pin.

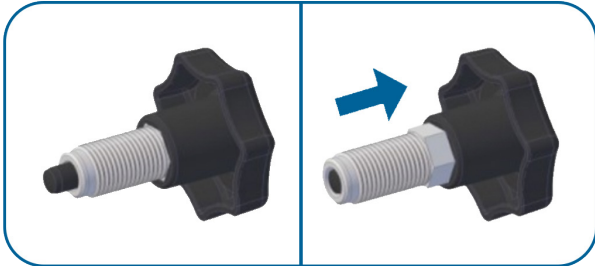

6. Raise or lower the platform. When the pin finds another hole, you'll hear the audible *click*.

Tighten the knob and you're all set!



Care Instructions

Wipe surfaces with a damp cloth and mild soap solution.

Dry thoroughly before use.



To watch the Fly Right in action,
visit our website: www.tumbltrak.com



Tumbl Trak
Train Smart